



L-2040D ASSEMBLY MANUAL


Ver.19.9.1

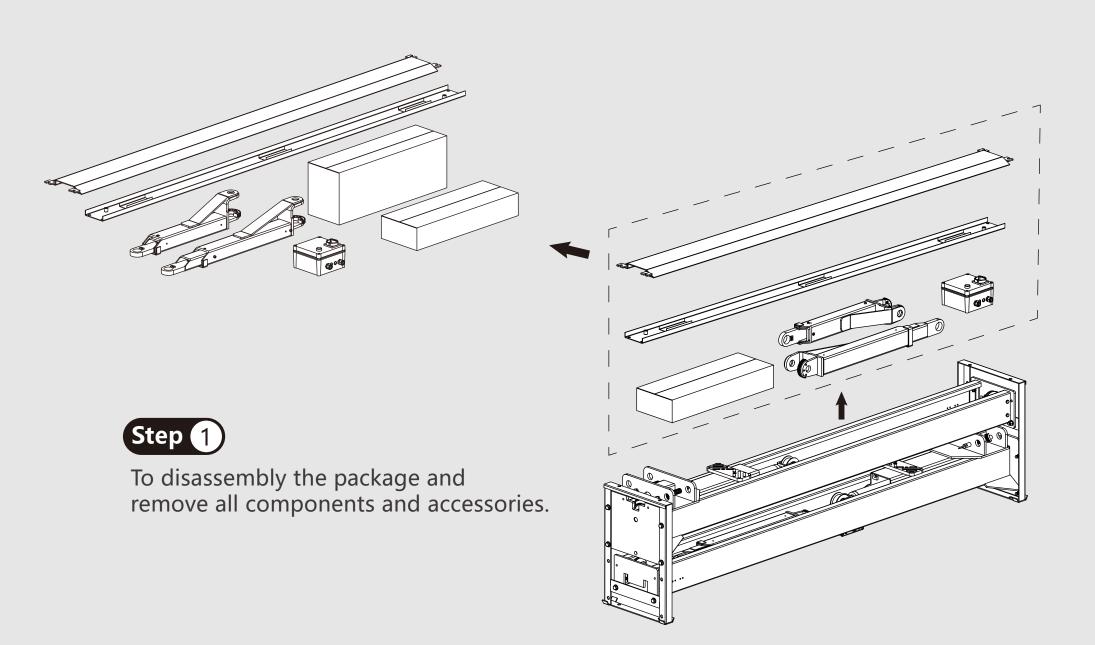




To remove fixing bolts of packing brackets.

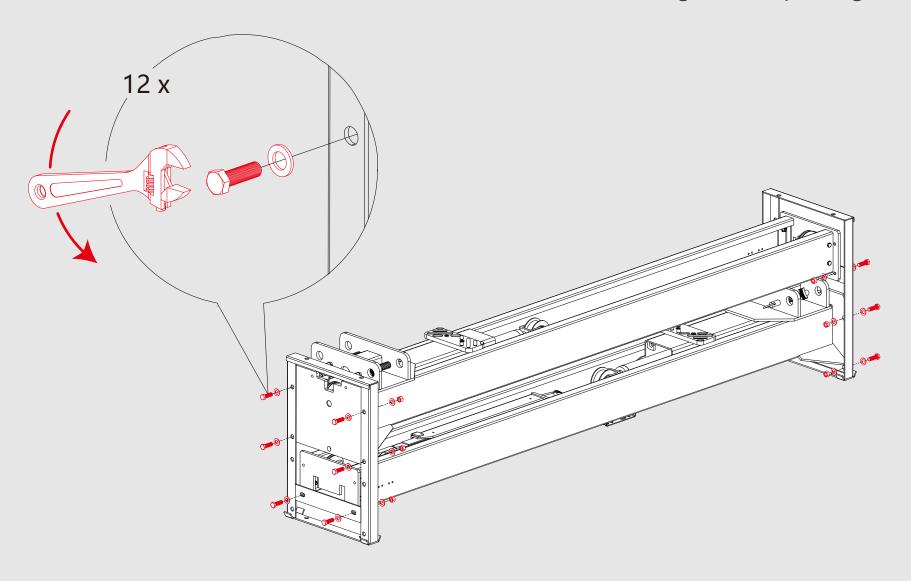


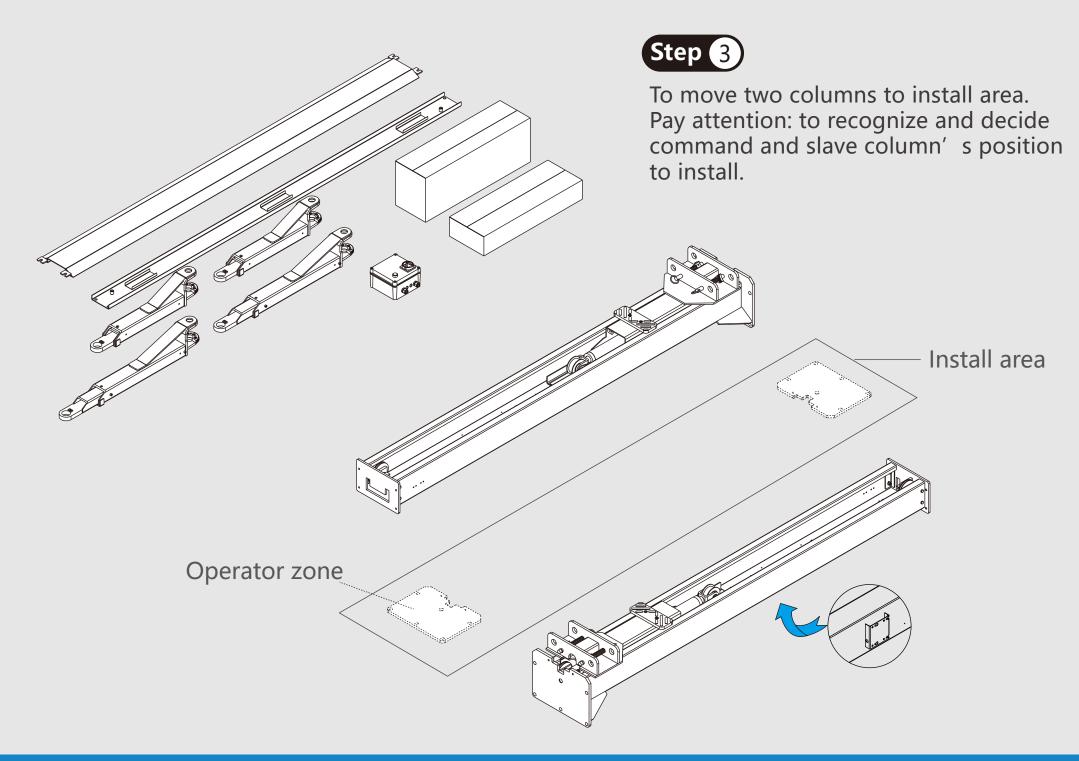

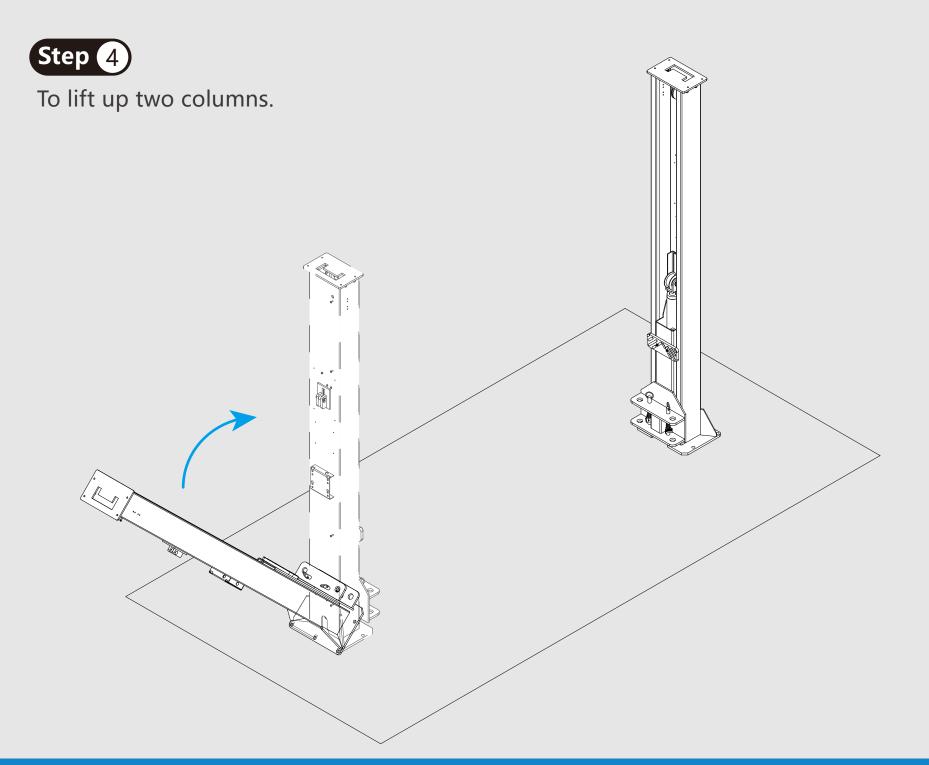




To measure the distance of two columns, and two columns face each other accurately.

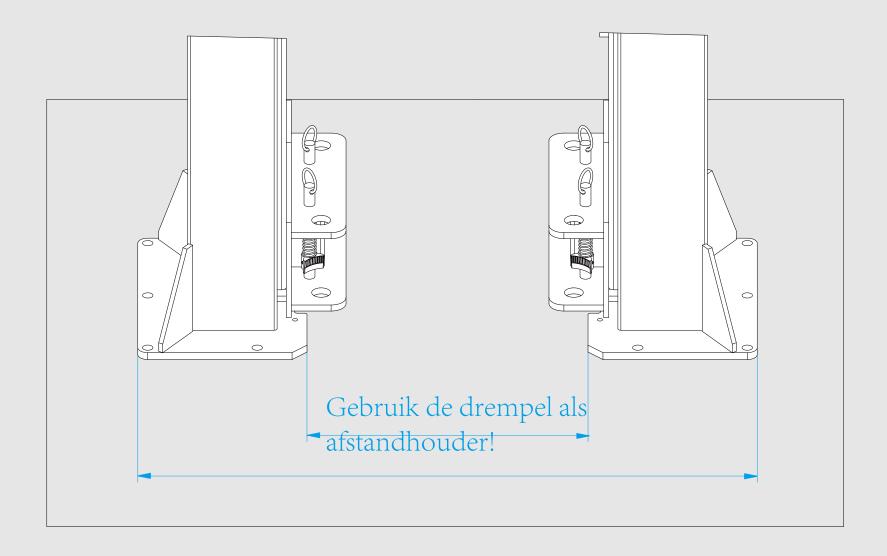





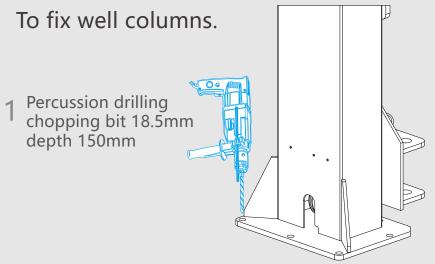

2 Air purge to remove dust inside of hole.


Insert bolt with bushes and screw nut, not to tighten to death, insert bushes under the column baseplate to adjust, by aid of spirit level measurement to make column to be vertical at 90°.

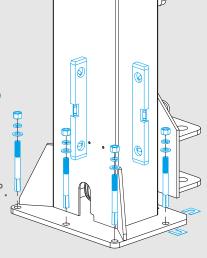


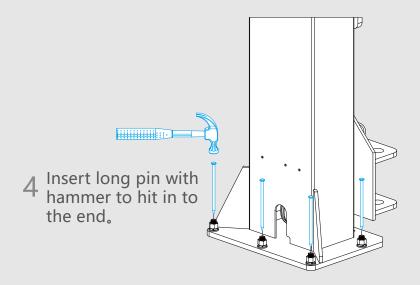





To fix well columns.

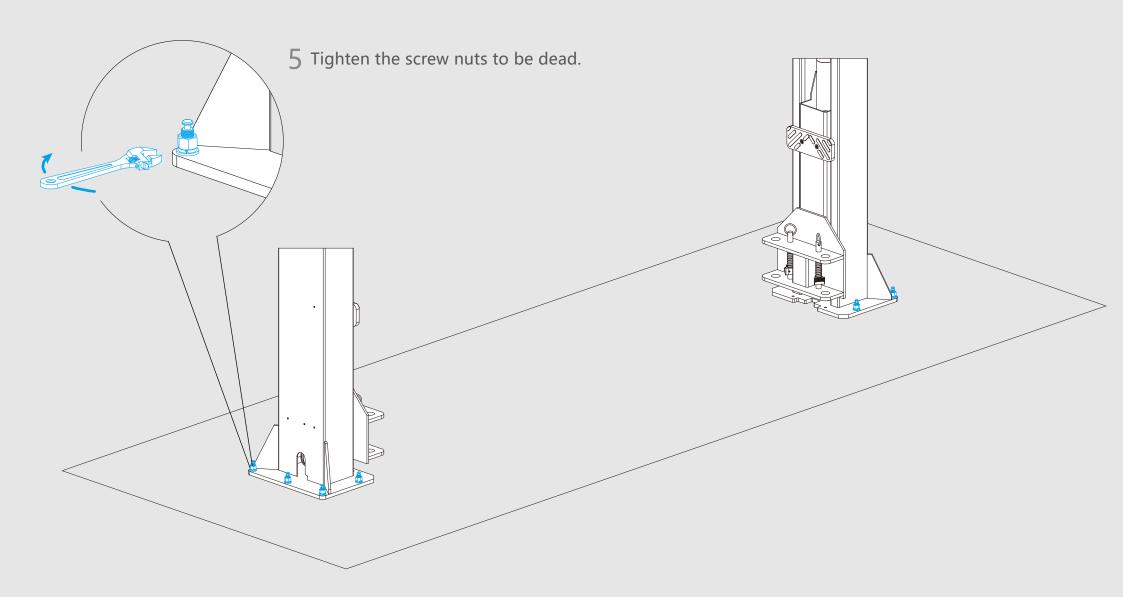


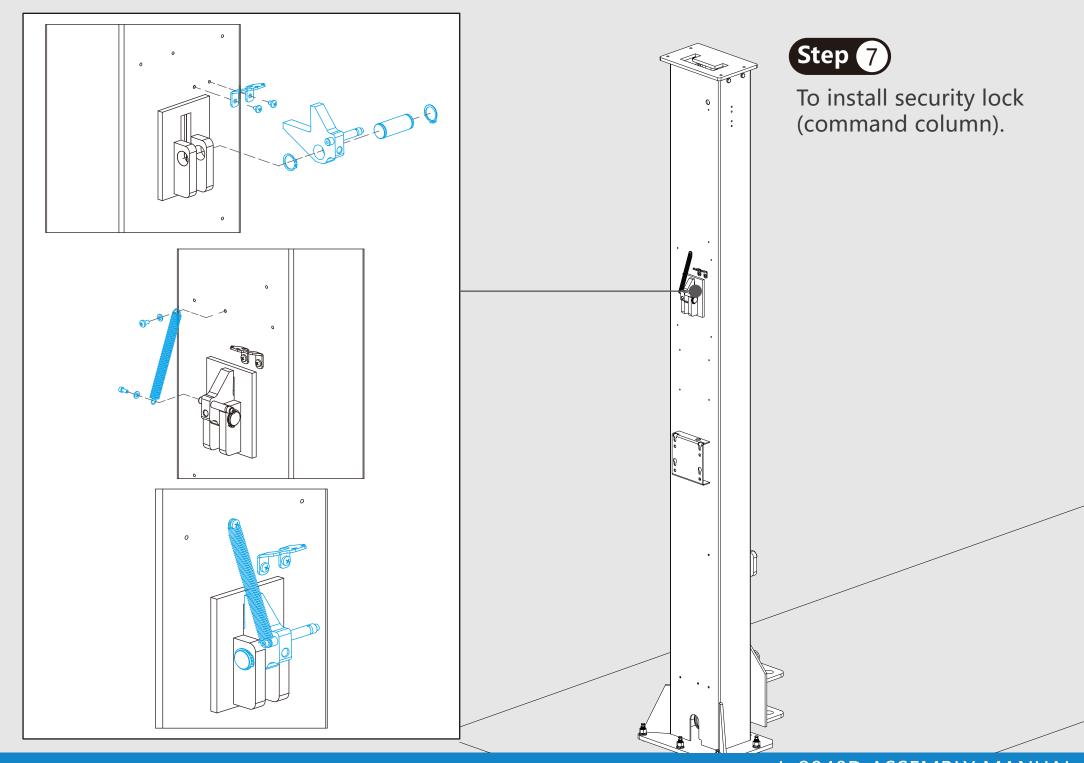


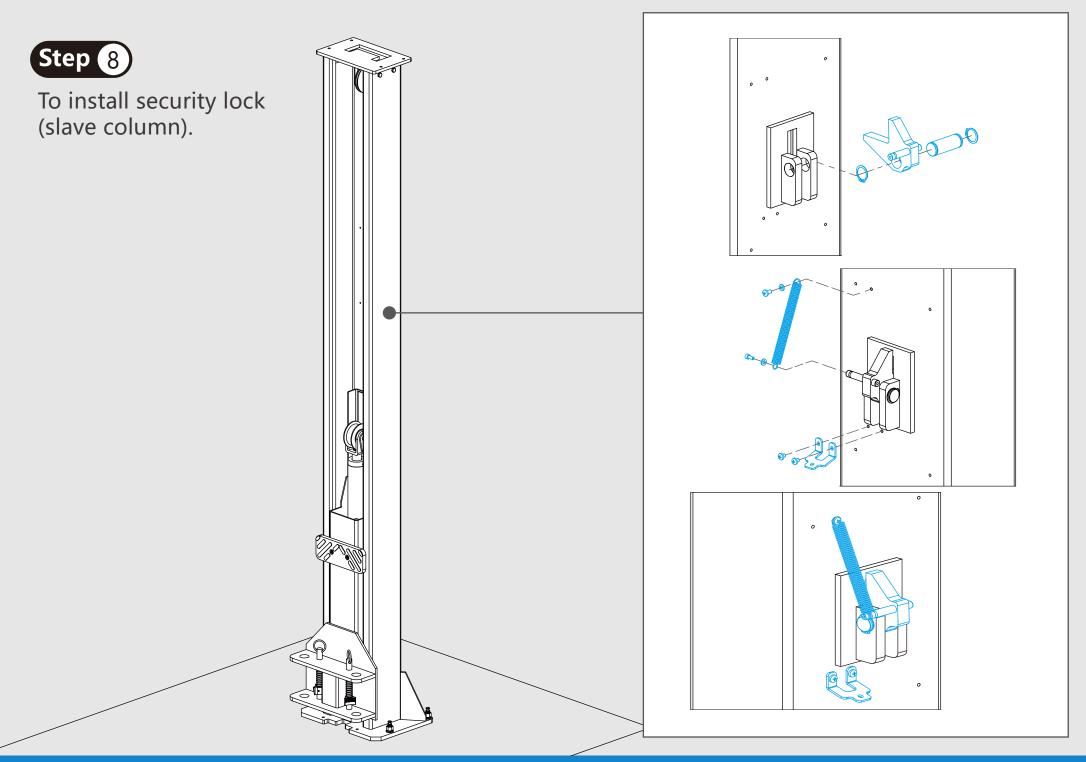

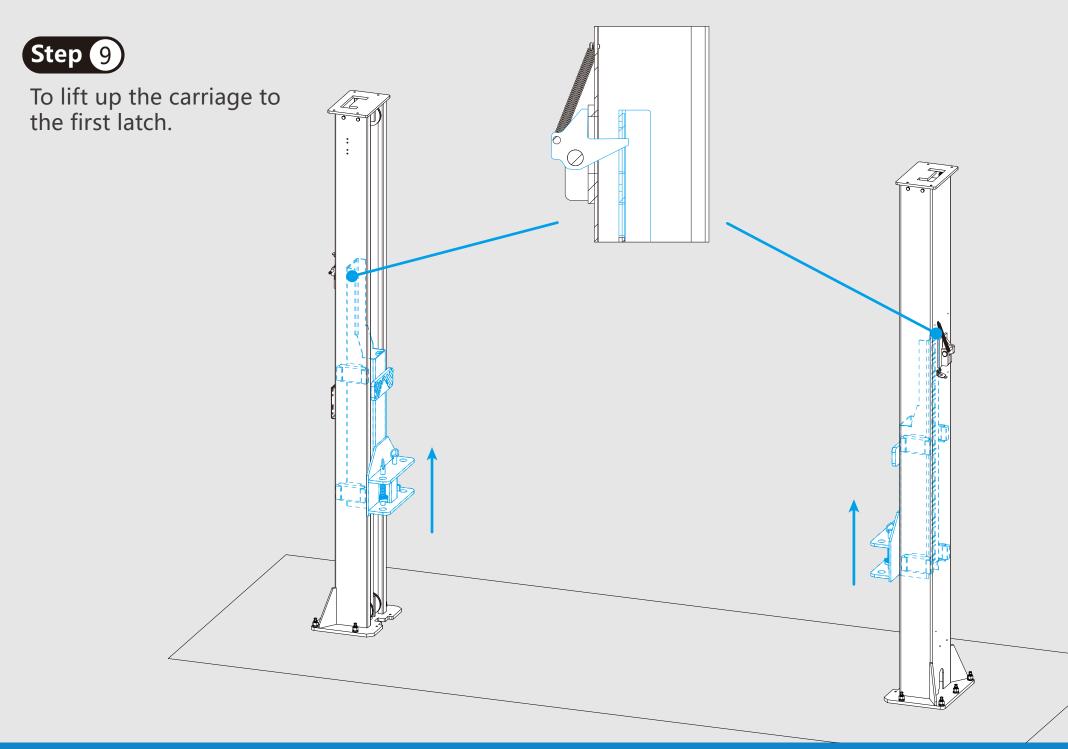




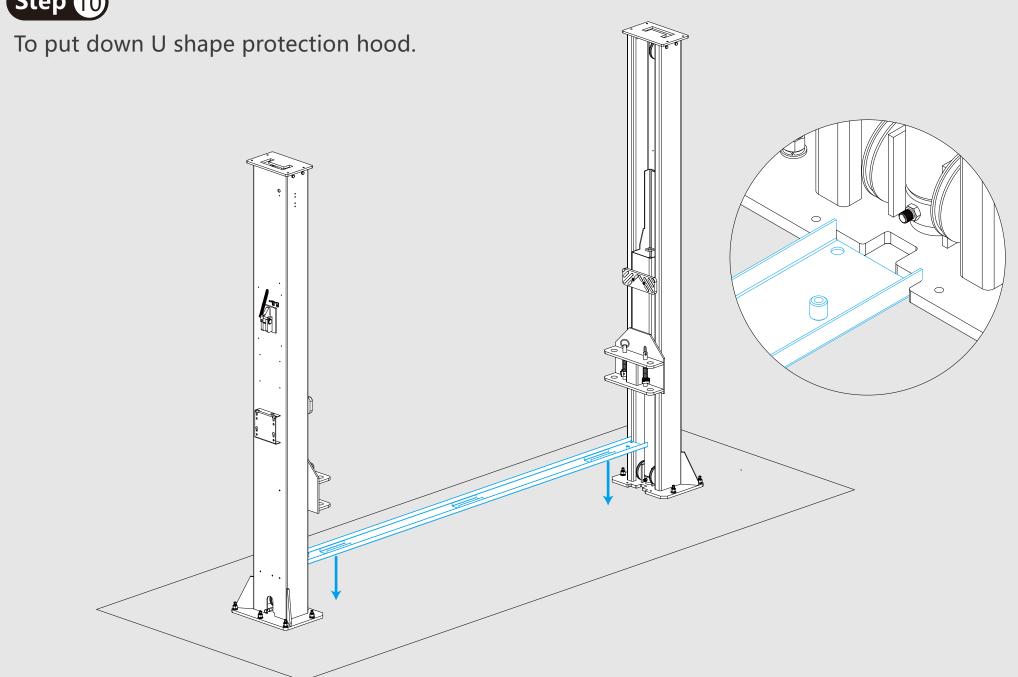


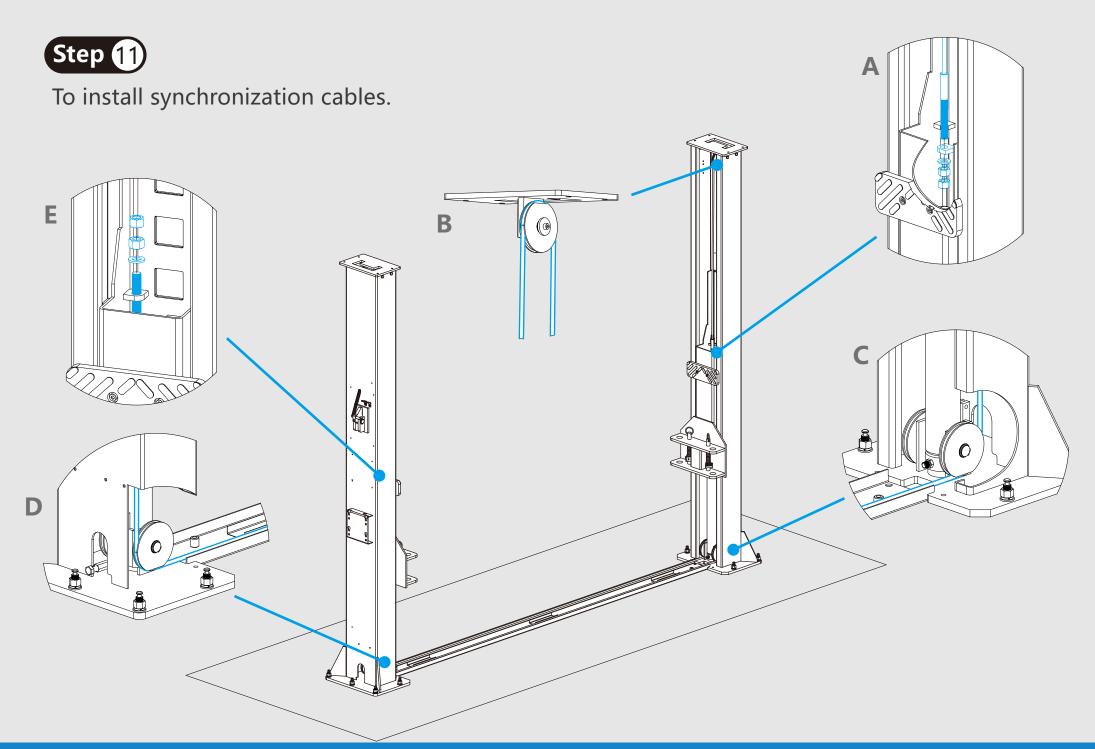





To install synchronization cables.

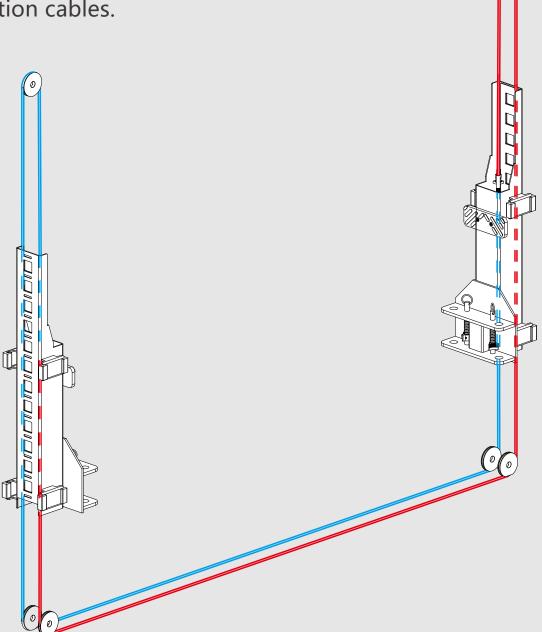

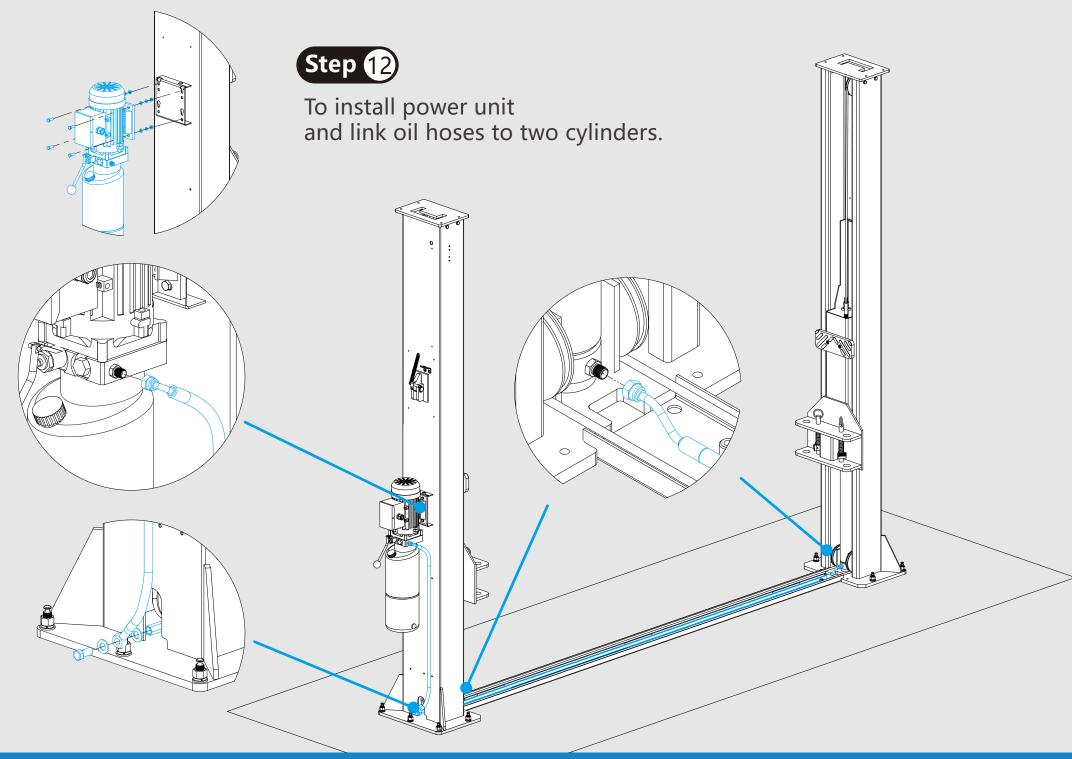

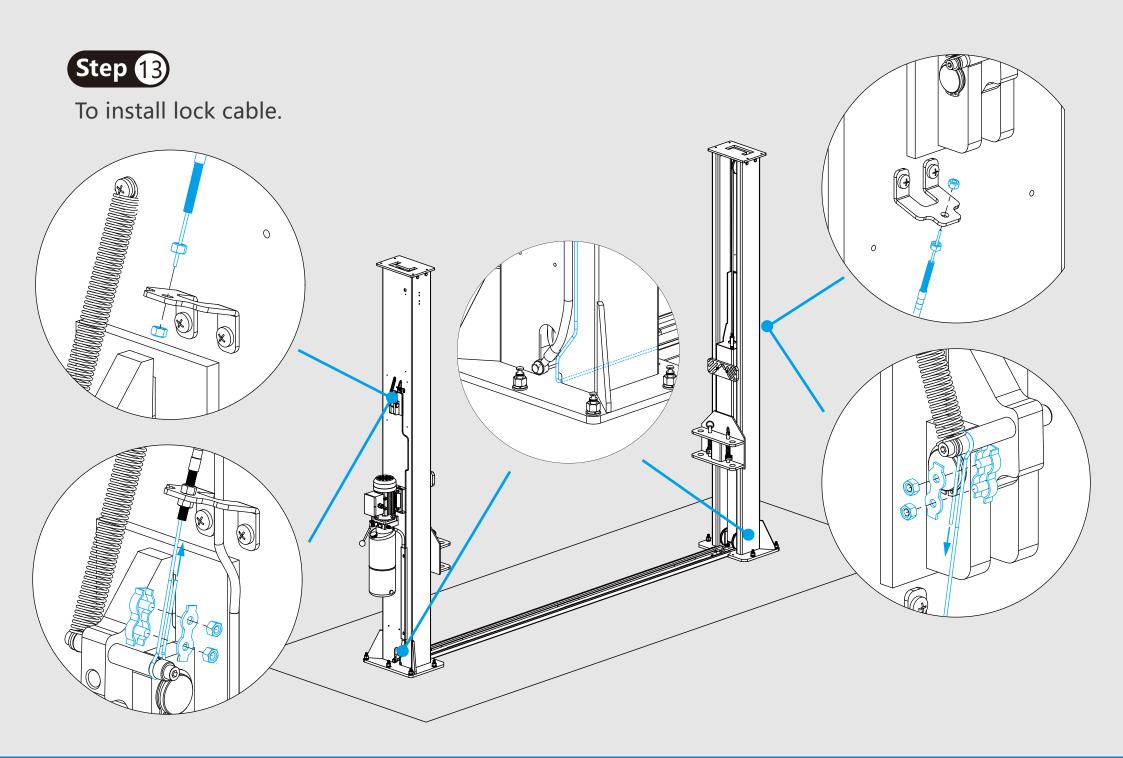

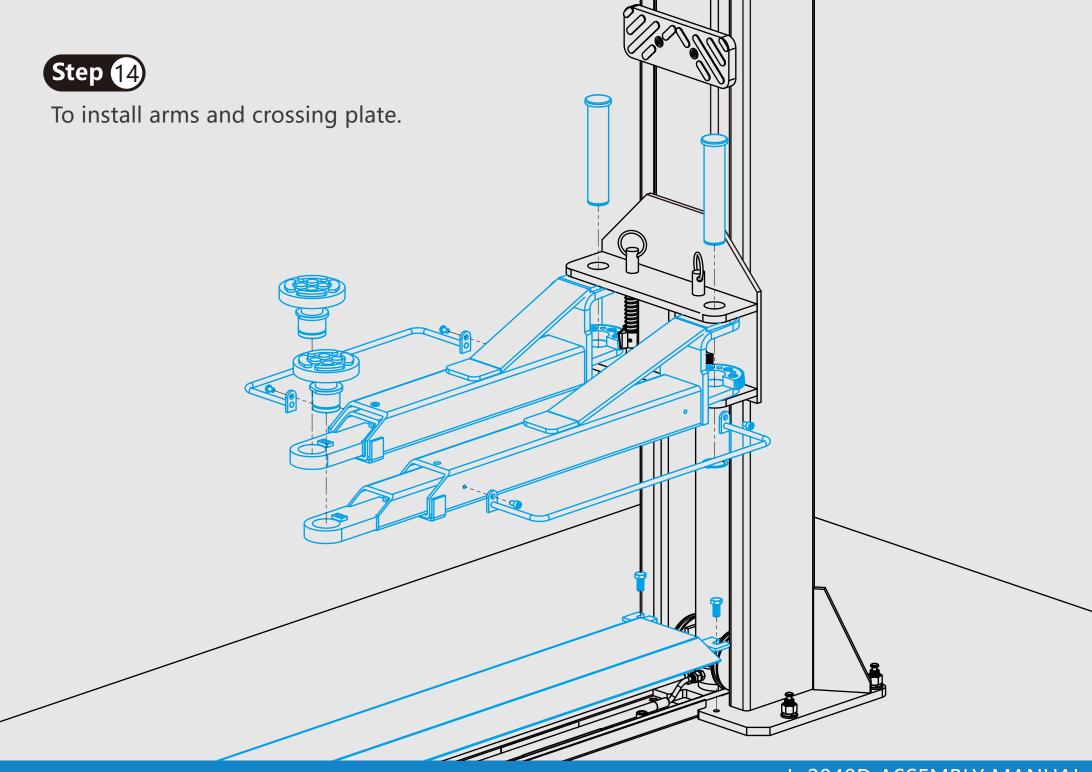



To fix control box and up limit switch.

